TRIPLE-R
HIGH PERFORMANCE LIGHTING
A LAZER LAMPS COMPANY

FORD BRONCO RAPTOR (2022+)

MODULAR BUMPER FOG LIGHT UPGRADE KIT







+1 520 468 2633
sales@triple-r-lights.com
600 North Bullard Avenue, Suite 6, Goodyear
AZ 85338, UNITED STATES

WWW.TRIPLE-R-LIGHTS.COM

MADE IN THE UK /TRIPLERLIGHTS

WHAT'S INCLUDED

- Lamp Holder with 2x Carbon-2 DRIVE (Yellow Dip) pre-mounted (LH/RH)
- M8x40 Button head screws (x4)
- Black lens covers for lamps (x2)
- Lamp Holder Bezel (LH/RH)
- Two-Lamp Wiring Kit

TOOLS REQUIRED

- Socket Set/Spanner
- Torx T40 & T30
- Push pin Pry Tool
- Wire Cutters
- Wire Strippers
- Heat Source

Also required (not included in kit):

- Cable Ties
- Heat Shrink
- Loom Tape
- Crimps

FOR VEHICLES WITH OE FOG LIGHTS

INSTALLATION TIME
1 HOUR

DIFFICULTY - 1 / 5




Ensure battery is disconnected before starting any wiring installation:

Remove negative on battery and insulate.

See last page for wiring diagrams.

INSTALLATION

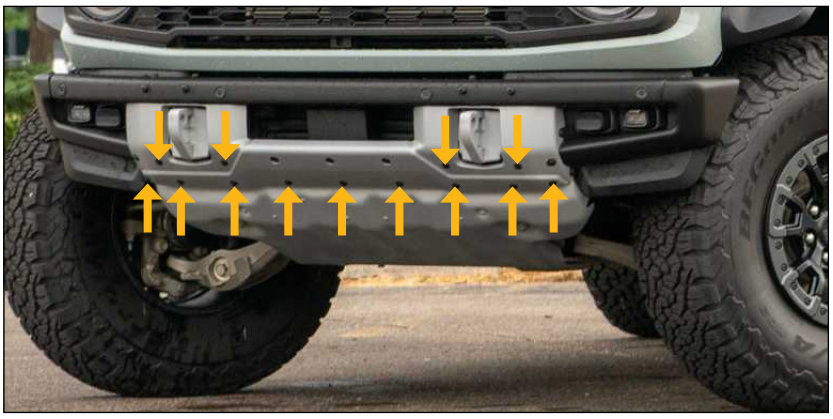

STEP 1

Remove the 13x Pushpins.

Then, pull at the corners to reaease the clips.




STEP 2

Remove the 3x T40 torx screws.



STEP 3

Remove the 4x plastic push pins behind the fog light unit.

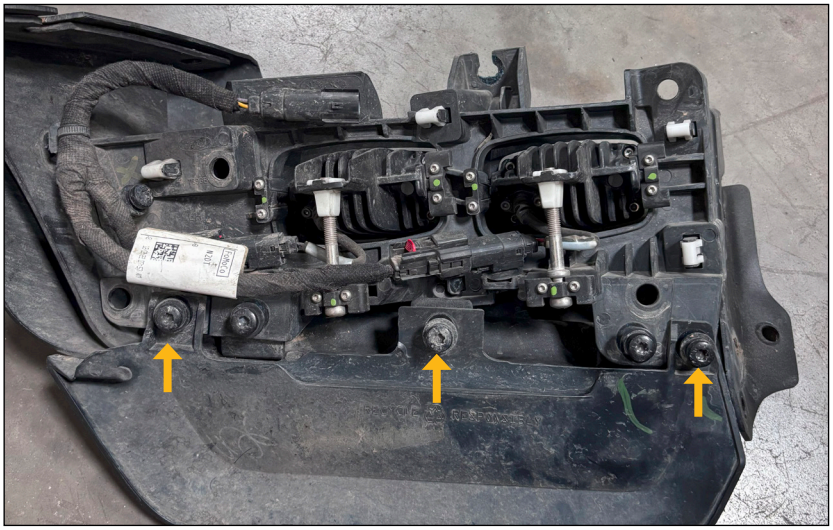


STEP 4

Remove the 3x T30 torx screws behind the fog light unit and remove valance.




STEP 5

Unplug fog splitter from main fog harness.

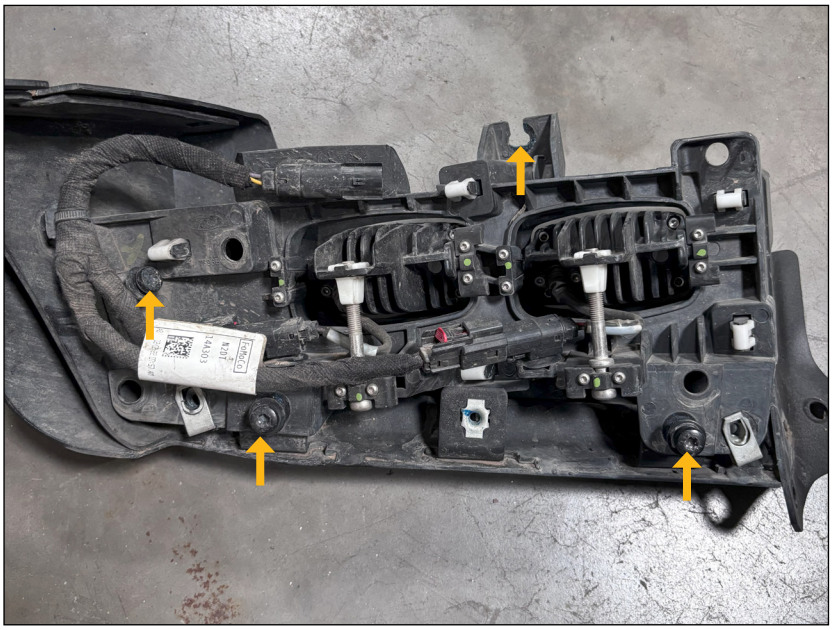

STEP 6

Remove 4x T30 torx screws that secure the fog housing to the bumper.

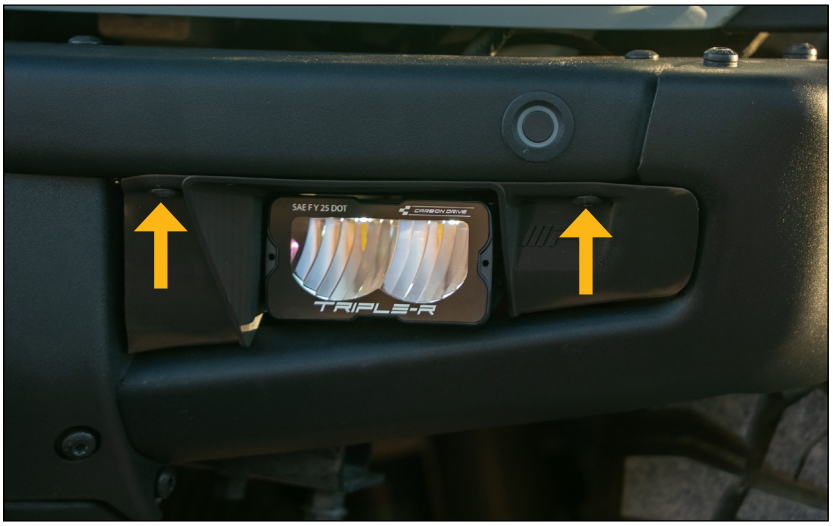


STEP 7

Once wiring has been completed (See next page for wiring diagrams), pass the lamp connectors through the bumper pocket, and connect to lamps.

Then, insert the fog light bezel into pocket and secure with the provided hardware (x2 Screws each side of vehicle).

OPTION 1: NO CAN (VEHICLE AUX SWITCHES)

FOG - Activated VIA vehicle fog.
HIGH BEAM - Activated by vehicle AUX 1.

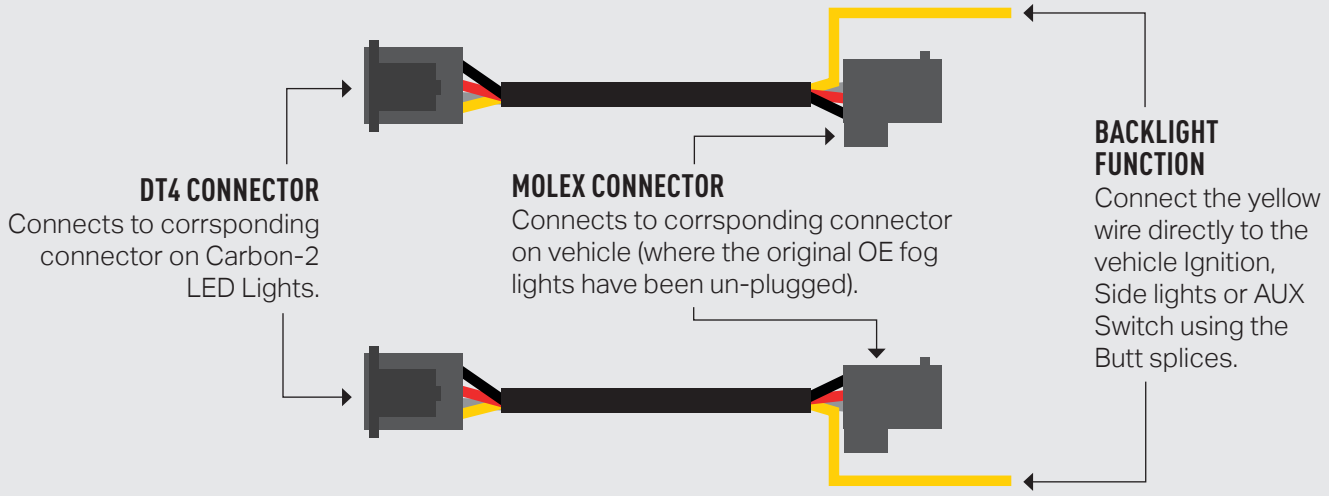


DT4 CONNECTOR
Connects to corrsponding connector on Carbon-2 LED Lights.

MOLEX CONNECTOR
Connects to corrsponding connector on vehicle (where the original OE fog lights have been un-plugged).

BACKLIGHT FUNCTION
Connect the yellow wire directly to the vehicle Ignition, Side lights or AUX Switch using the Butt splices.

OPTION 2: WITH CANNY (VEHICLE HARNESS: 2L-DT4-290)

(Sold seperately - CANNY Smart Button also available)

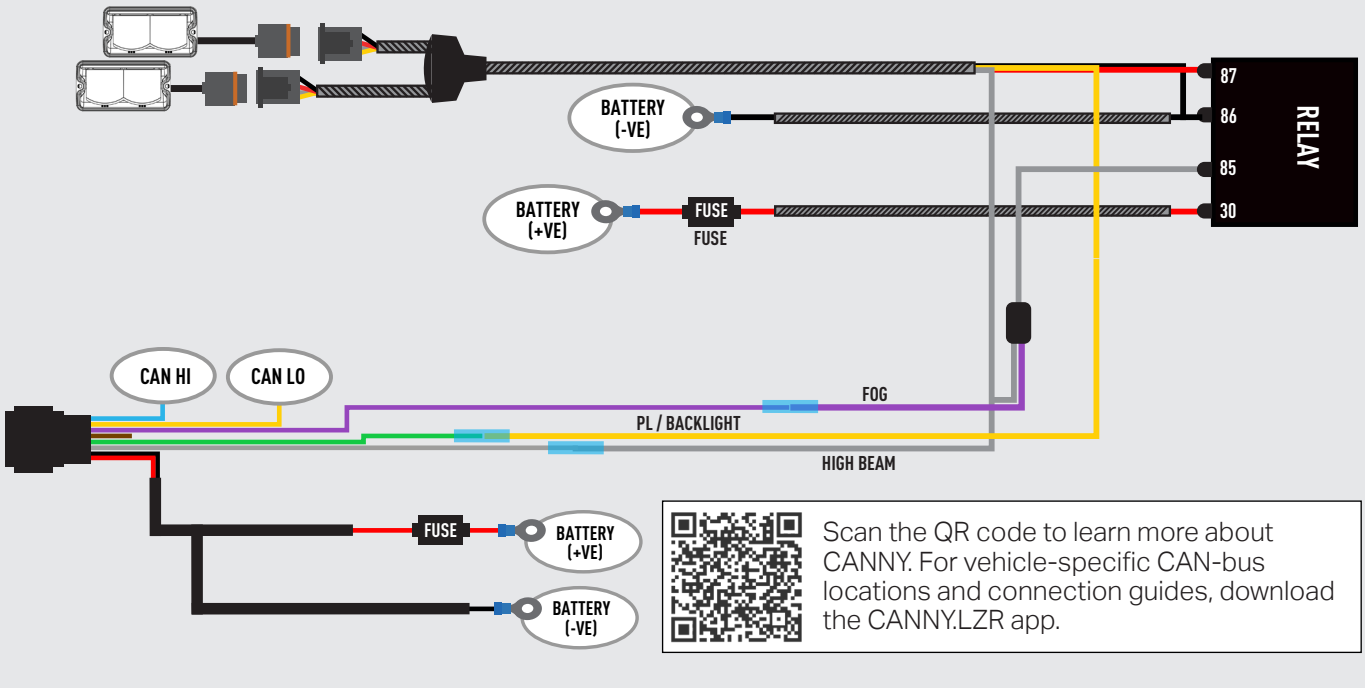

Scan the QR code to learn more about CANNY. For vehicle-specific CAN-bus locations and connection guides, download the CANNY.LZR app.